

SELECTPRO BOLT-ON CODE SINGLE-SIDED



CODE: C

Adjustable Latchbolt 2-Year Warranty

Suitable for metal gate frames. For wooden gates our surface-mounted option is available.


INCLUDED IN THE BOX

- 1 x 3mm hex key
- M8 fixing bolts
- Face plate
- Latchbolt
- Strike plate (self-drilling fasteners)
- Code changing pack



Achieve convenient, keyless entry with this reliable digital gate lock.

Featuring a mechanical keypad on the outside and a free-turn handle on the inside, this lock combines convenience and robust functionality. Its auto-latching feature ensures the gate locks upon closing, with the added flexibility of a hold-back function to keep the gate unlocked when needed.

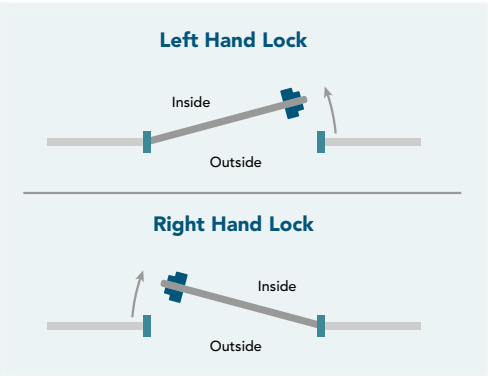

Product code	Description
DGLS01L	To fit 10-30mm (½" - 1 ¼") gate frames, left hand
DGLS01R	To fit 10-30mm (½" - 1 ¼") gate frames, right hand
DGLS02L	To fit 40-60mm (1 ½" - 2 ¼") gate frames, left hand
DGLS02R	To fit 40-60mm (1 ½" - 2 ¼") gate frames, right hand

WHAT DOES KEYLATCH MEAN?

Lock Type	What happens when the gate closes?	What do I need to do next to lock the gate?	Best for:
Keylatch	Latches shut automatically, but doesn't lock	Use the key if you want to lock the gate	Best for convenience, when you want the gate to catch and open conveniently with the handle, then choose when to fully lock it.

TECHNICAL SPECIFICATIONS

Lock type	Mechanical code gate lock
Keypad type	Single-sided
Handing	Left-handing, right-handing
Latchbolt throw	20mm (3/4")
Lock case width	98mm (3-3/4")
Fixing method	3-hole drilling. Bolt-on
Fixings included	Yes
Warranty	2 years
Compatible Keeps	BSKG

HELP & SUPPORT


UK: +44 1243 558580 US: +1 214 872 9687

www.gatemasterlocks.com support@gatemasterlocks.com


INSTALLATION INSTRUCTIONS

1. Drill 2 x 9mm (3/8") holes at 92mm (3 2/3") centres for fixing bolts provided.
2. Drill a 18mm (3/4") clearance hole for the latchbolt at 22mm (7/8") centres down from the top fixing hole.
3. Fix lock in place using stainless steel clamp plate, bolt support plate and 2 stainless steel countersunk fixing bolts supplied.
4. Adjust the latchbolt length required and lock it in place with the hex key.


Step 1 & 2:

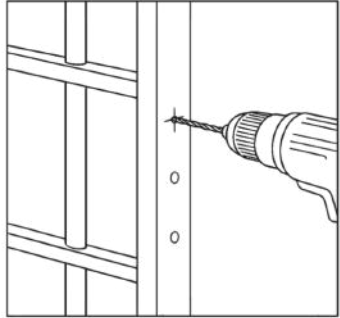

Step 3:

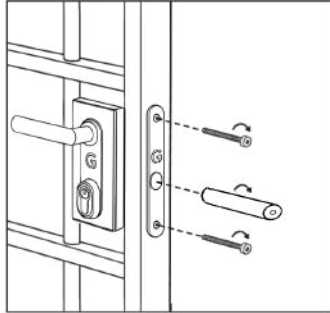


Step 4:

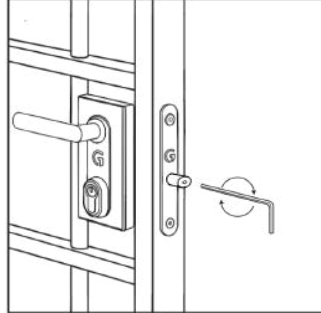

Installing the keep:

1. Drill clearance hole in keep or outer frame to receive the latchbolt. Slot this hole vertically to allow for the gate sag. Fit strike plate by either welding or screw fixing it to the gate post.
2. Ensure latchbolt moves freely without binding on gate or frame.

HOW TO ADJUST To adjust latchbolt length insert 3mm long arm hex key (supplied) into end of bolt and release locking screw. Rotate bolt as required and re-tighten locking screw.

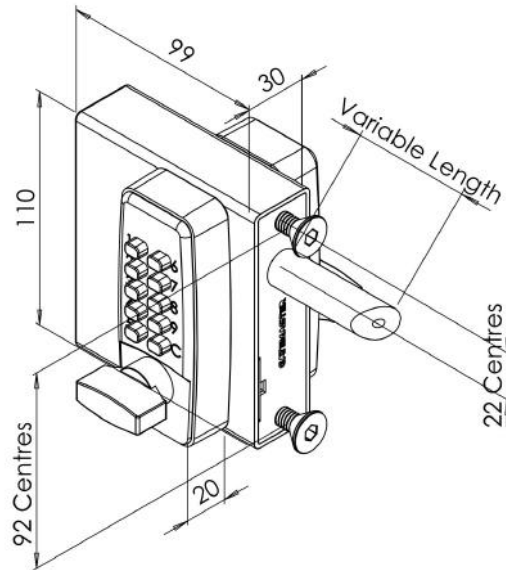

MAINTENANCE

Every 3 months:

1. Remove keypads from the lock.
2. Spray the inside of the lock thoroughly with WD40 or equivalent, through the tumbler holes at the back of the lock.
3. Spray all the fixing accessories and the latch with WD40 or equivalent.
4. Push each of the buttons and rotate the knob several times to make sure the lock is working smoothly.

HOW TO CHANGE THE CODE

© Copyright Gatemaster 2026

1. Check the original code is working on both keypads
2. To remove the keypads – Insert a flat screwdriver into the hole in the forend plate and lever out the keypad retaining plate. This will release one keypad. Slide out the lock mechanism and the other keypad can then be removed by accessing the screws through the lockcase.
3. Turn the keypad over and remove the 4 red screws
4. Lift off the covering panel. Be careful as there are 10 springs attached to this panel. Note that the red tumblers relate to the code shown above. Also note that the C tumbler is uncoloured and should not be removed.
5. To change the code hold the keypad with the code buttons down and depress & hold the C button (if this is not done you may damage some of the internal components). Reposition the tumblers to the new code (red tumblers are coded and blue tumblers are uncoded). Ensure that the square cut-out on each tumbler is facing the outside of the lock body, also ensure that the coloured mark is facing upwards. If any one tumbler is upside down or the wrong way round the lock will not work and if forced will break the internal components. The code must always start with a 'C'
6. Replace the covering panel and tighten the 4 red screws.
7. The code is now changed, check to see that it is working correctly and make a note of the code for future reference. Once satisfied that the lock is working correctly refit keypads to the lock case.

