

DOUBLE THROW LATCH DEADLOCK



CODE: C

Code & Key lock for extra security

Suitable for metal gate frames.  
Hook and pin prevents gates being opened when locked  
Designed for use on sliding gates which need to be latched shut for security  
Double-sided or single-sided versions available depending on level of security needed.

INCLUDED IN THE BOX

- Hook lock
- Eurocylinder
- Pair of digital keypads
- Fixings
- A set of keys (3)



| Product code | Description                             |
|--------------|-----------------------------------------|
| HLSK30       | 30mm (1-1/8") box section, single-sided |
| HLSK40       | 40mm (1-5/8") box section, single-sided |
| HLSK50       | 50mm (2") box section, single-sided     |
| HLDK30       | 30mm (1-1/8") box section, double-sided |
| HLDK40       | 40mm (1-5/8") box section, double-sided |
| HLDK50       | 50mm (2") box section, double-sided     |

WHAT DOES DEADLOCK MEAN?

| Lock Type      | What happens when the gate closes?           | What do I need to do next to lock the gate? | Best for:                                                                                                                       |
|----------------|----------------------------------------------|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Latch Deadlock | Latches shut automatically, but doesn't lock | Use the key if you want to lock the gate    | Best for convenience, when you want the gate to catch and open conveniently with the handle, then choose when to fully lock it. |

TECHNICAL SPECIFICATIONS

|                                             |                                                       |
|---------------------------------------------|-------------------------------------------------------|
| Lock type                                   | Code & keyed gate lock                                |
| Keypad type                                 | Single or double-sided                                |
| Suitable for                                | Sliding gates                                         |
| Lock size                                   | 108 x 275mm, choice of 3 widths (30mm, 40mm and 50mm) |
| From centre of eurocylinder to front of box | 65mm                                                  |

Please note:

If you need to change the handing of the hook lock you can remove the keypads and swap them round.

HELP & SUPPORT



UK: +44 1243 558580      US: +1 214 872 9687




www.gatemasterlocks.com



support@gatemasterlocks.com

1. Cut out a section of the box section on the gate and weld-in the steel case in its place.
2. Galvanise or pain the gate with the lock built in.
3. Fit the hook lock and digital keypads with the fixings provided.

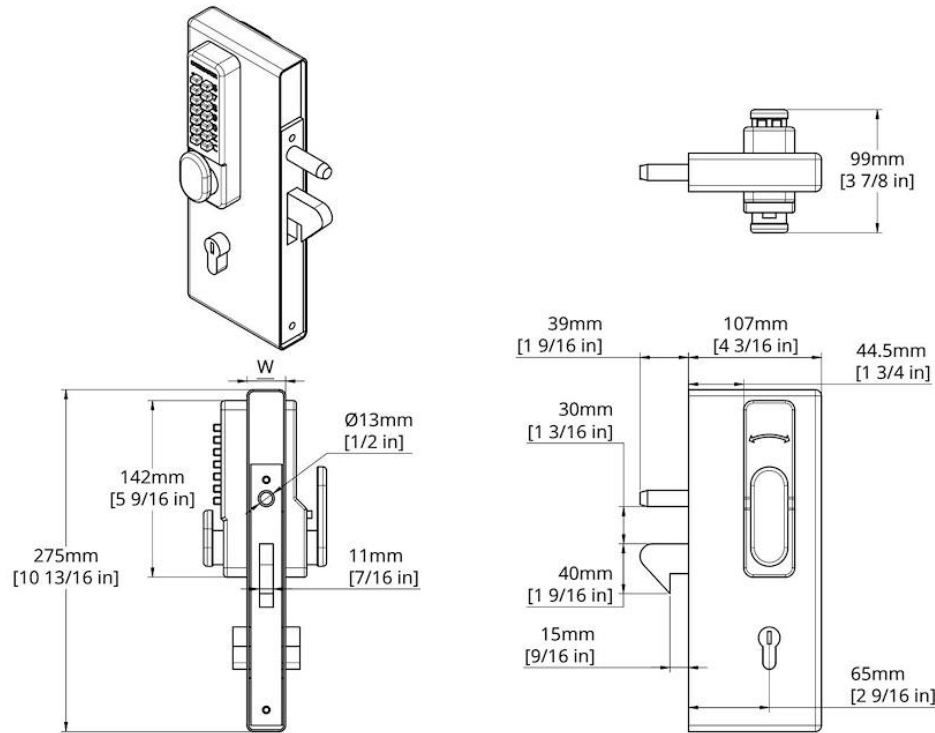

## MAINTENANCE

### Every 3 months:

1. Remove keypads from the lock.
2. Spray the inside of the lock thoroughly with WD40 or equivalent, through the tumbler holes at the back of the lock.
3. Spray all the fixing accessories and the latch with WD40 or equivalent.
4. Push each of the buttons and rotate the knob several times to make sure the lock is working smoothly.

1. Check the original code is working on the keypad.
2. Remove the keypad off the lock. To do this, unscrew the two screws fixing the keypad to the panel.
3. Turn the keypad over and remove the 4 screws.
4. Lift off the covering panel carefully as there are 10 springs attached to this panel. Note that the red tumblers relate to the code shown above. Also note that the C tumbler is uncoloured and should not be removed.
5. To change the code hold the keypad with the code buttons down and depress & hold the C button (if this is not done you may damage some of the internal components). Reposition the tumblers to the new code (red tumblers are coded and blue tumblers are uncoded). Ensure that the square cut-out on each tumbler is facing the outside of the lock body, also ensure that the coloured mark is facing upwards. If any one tumbler is upside down or the wrong way round the lock will not work and if forced will break the internal components. The code must always start with a 'C'
6. Replace the covering panel and tighten the 2 screws.
7. The code is now changes, check to see that it is working correctly and make a note of the code for future reference. Once satisfied that the lock is working correctly refit keypads to the panel using the 2 screws and reassemble the lock.

