

SELECTPRO SURFACE-MOUNTED CODE DOUBLE-SIDED



CODE: C

Adjustable Latchbolt

2-Year Warranty


Suitable for wooden gate. For metal gates please see our alternative bolt-on version.

INCLUDED IN THE BOX

- 1 hex key
- M8 fixing bolts
- Face plate
- Latchbolt
- Gate bracket with fixings
- Keep with fixings
- Code changing pack



Achieve convenient, keyless access with this digital gate lock. Perfect for surface fitting on wooden gates, it combines convenience with reliability. Installation is simple, just drill 3 holes in the gate frame and attach using the supplied fixing screws. The code can be easily customised to suit your needs.

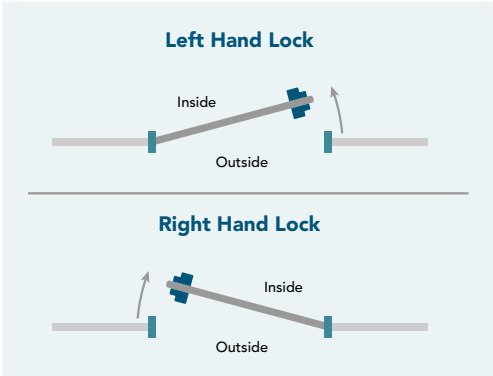

Product code	Description
DGLWL	Left-hand, double-sided
DGLWR	Right-hand, double-sided

WHAT DOES KEYLATCH MEAN?

Lock Type	What happens when the gate closes?	What do I need to do next to lock the gate?	Best for:
Keylatch	Latches shut automatically, but doesn't lock	Use the key if you want to lock the gate	Best for convenience, when you want the gate to catch and open conveniently with the handle, then choose when to fully lock it.

TECHNICAL SPECIFICATIONS

Lock type	Mechanical code gate lock
Keypad type	Single-sided
Handing	Left-handing, right-handing
Latchbolt throw	20mm (3/4")
Lock case width	98mm (3-3/4")
Fixing method	Surface fixed
Fixings included	Yes
Warranty	2 years

HELP & SUPPORT



UK: +44 1243 558580

US: +1 214 872 9687



www.gatemasterlocks.com




support@gatemasterlocks.com

INSTALLATION INSTRUCTIONS

1. Position angle bracket on edge of the gate (can overhang edge of gate by up to 15mm (9/16") if required to accommodate a gap between the gate and gate post) and mark 3 holes for the outside keypad fixing screws and spindle. For outward opening gates make sure to leave a gap between the bracket and the post so the lock doesn't clash with the keep when opening.
2. Remove angle bracket and drill 3 holes 9.0mm (3/8") diameter through the gate.
3. Cut the 2 x M5 screws and the spindle to length to suit the gate thickness. M5 screws should be cut to gate thickness size, less 16mm (5/8"). The spindle should be cut to gate thickness plus 68mm (2-5/8") for double sided and plus 82mm (3-1/4") for single sided.
4. Fit the outside keypad and angle bracket using M5 screws and insert spindle (Ensure spindle is not binding on the gate).
5. Fix angle bracket securely using screws through the remaining 2 countersunk holes.
6. Position lock on to the spindle and fix to the angle bracket using 2 x M8 countersunk screws.
7. Test the lock to check it operates freely.
8. Fix the strike plate to the gate post.


HOW TO ADJUST To adjust latchbolt length insert 3mm long arm hex key (supplied) into end of bolt and release locking screw. Rotate bolt as required and re-tighten locking screw.

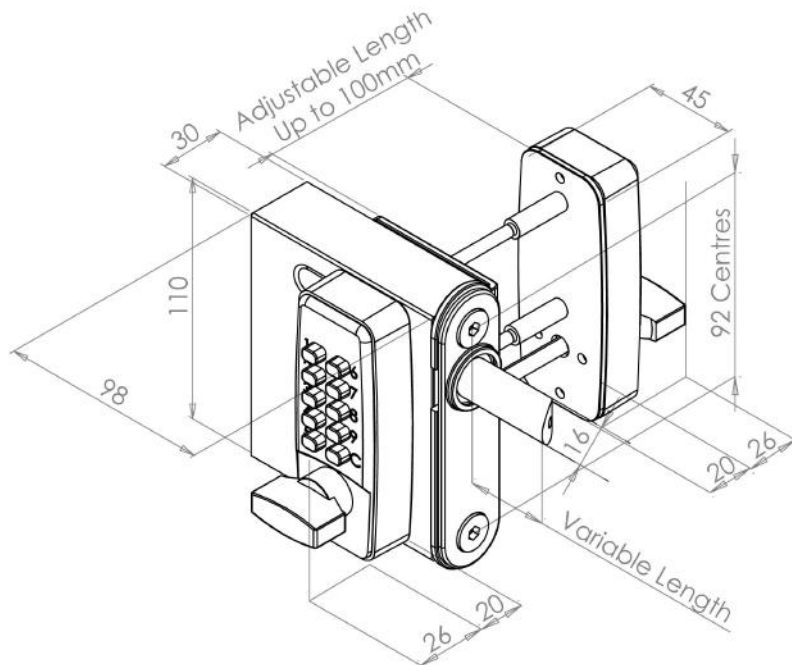

HOW TO CHANGE THE CODE

© Copyright Gatemaster 2026

1. Check the original code is working on both keypads
2. For standalone keypad: remove rear black plate from keypad using flat screwdriver or similar tool as seen below. For DGLW double sided locks - to remove the keypad attached to the lock: Left handed lock - Slide out the internal lock mechanism and the keypad can be removed by accessing the screws through the inside of the lockcase. Right handed lock - Insert a flat screwdriver into the hole in the forend plate and lever out the keypad retaining plate (see image opposite). This will release the keypad. Turn the keypad over and remove the 4 red screws.
3. Lift off the covering panel. Be careful as there are 10 springs attached to this panel. Note that the red tumblers relate to the code shown above. Also note that the C tumbler is uncoloured and should not be removed.
4. To change the code hold the keypad with the code buttons down and depress and hold the C button (if this is not done you may damage some of the internal components). Reposition the tumblers to the new code (red tumblers are coded and blue tumblers are uncoded). Ensure that the square cut-out on each tumbler is facing the outside of the lock body, also ensure that the coloured mark is facing upwards as pictured below. If any one tumbler is upside down or the wrong way round the lock will not work and if forced will break the internal components. The code must always start with a 'C'.
5. Replace the covering panel and tighten the 4 red screws.
6. The code is now changed, check to see that it is working correctly and make a note of the code for future reference. Once satisfied that the lock is working correctly refit keypads to the lock case.

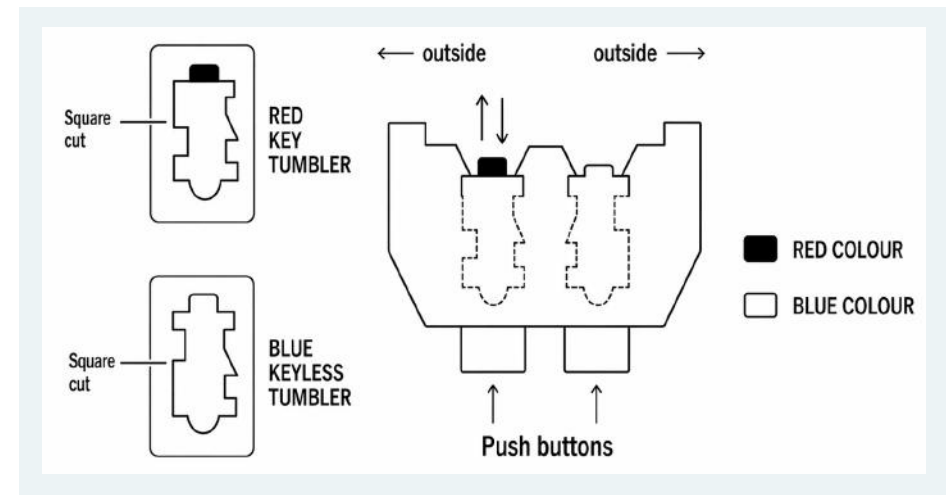

MAINTENANCE

Every 3 months:

1. Remove keypads from the lock.
2. Spray the inside of the lock thoroughly with WD40 or equivalent, through the tumbler holes at the back of the lock.
3. Spray all the fixing accessories and the latch with WD40 or equivalent.
4. Push each of the buttons and rotate the knob several times to make sure the lock is working smoothly.